

Good to know


• Remove the backplate from the luminaire

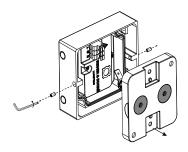

• Use only a fine tool (and no cutting tool) to puncture the center of the gasket.

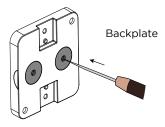

• Pull the cable throught the back plate.

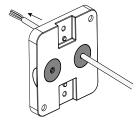

 Choose which gasket you require, depending on the thickness/diameter of the incoming wire.
If the pre-installed gasket is not the size you need, it can be replaced with one of the other supplied types.

