

STATION

INSTALLATION INSTRUCTIONS | DECEMBER 2022

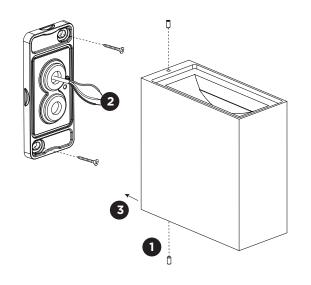

Mounting base:

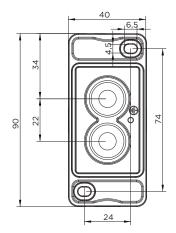

grommets:

| A | B | C |
|---|---|---|
| | | # |
| ROUND H05RN-F H07RN8-F H07RN-F | ROUND H05RN-F | ROUND |
| min 6.8mm max 8.9mm | min 5mm max 6.8mm | min 1.5mm max 2.6mm |
| 2or3x 0.75mm ² 2or3x 1.0mm ² 2or3x 1.5mm ² | 2or3x 0.75mm ² 2x 1.0mm ² | 0.75mm ² 1.5mm ² |
| | H05RN-F H07RN8-F H07RN-F min 6.8mm max 8.9mm 2or3x 0.75mm ² 2or3x 1.0mm ² | HOSRN-F HO7RNS-F HO7RN-F min 6.8mm max 8.9mm cor3x 0.75mm ² 20r3x 1.0mm ² |

 
DIMENSIONS

 


1.0 / 2.0

MOUNTING INSTRUCTION


- Remove the mounting base from the luminaire by loosening the side screws and mount it on the wall with screws (screws are not included).
- 2 POWER CONNECTION







 Please use a matching grommet based on the used 220-240V cable and the corresponding type in the overview table.



Push the grommet into the back plate.

Pull the cable through the back plate.


Mount the back plate on the wall.


3 Fix the luminaire to the mounting base with the socket screws.


0 0 0

STATION INSTALLATION INSTRUCTIONS | DECEMBER 2022

INDOOR 2

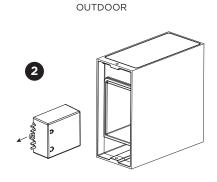

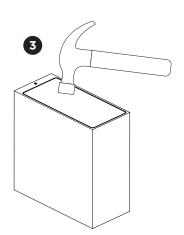

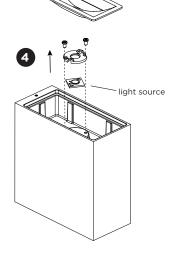



- 1 Loosen the side screws and remove the lamp housing from the mounting base.
- 2 Loosen the wires to remove the driver.
- 3 Break the glass.
- Take out the reflector and unscrew the holder to remove the light source.



The driver can be replaced by the end user.



The light source is not replaceable.



This luminaire contains a light source with the energy class F.