
VENN 1.0 phase cut

INSTALLATION INSTRUCTIONS | MARCH 2023

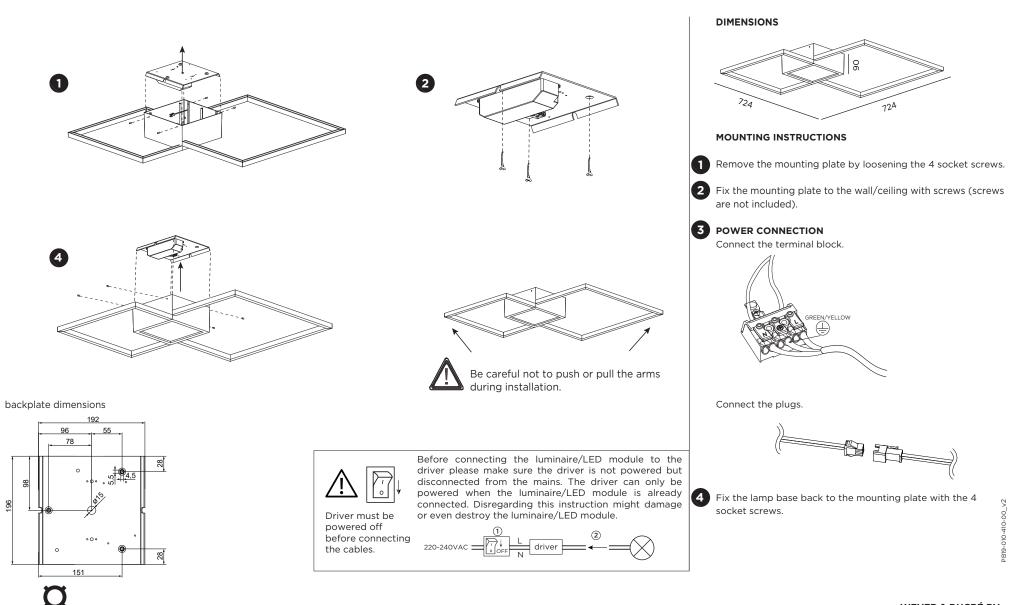


WEVER & DUCRÉ

LIGHTING

WEVER & DUCRÉ BV Spinnerijstraat 99/21, 8500 Kortrijk, Belgium weverducre.com

VENN 1.0 phase cut

INSTALLATION INSTRUCTIONS | MARCH 2023

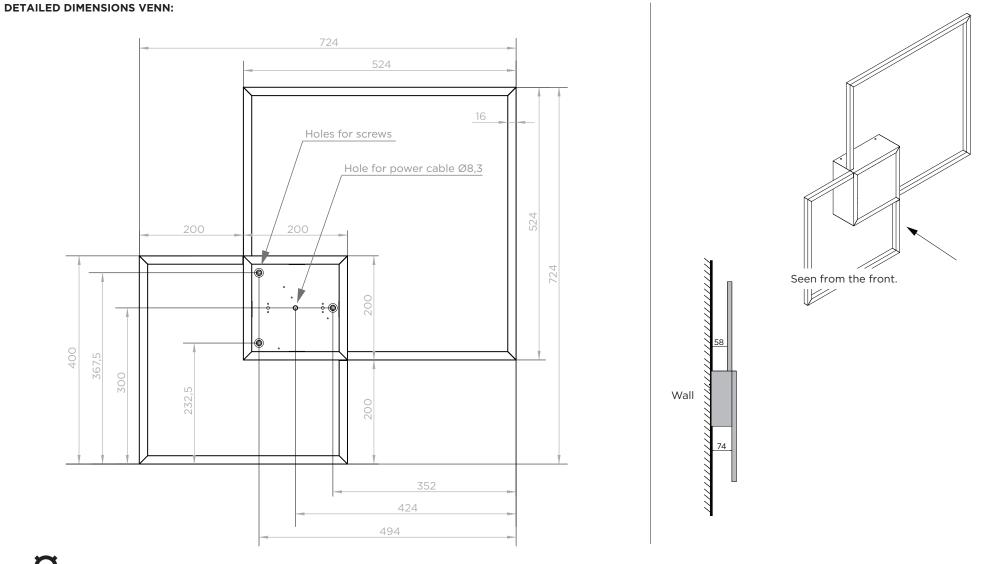


WEVER & DUCRÉ


WEVER & DUCRÉ BV Spinnerijstraat 99/21, 8500 Kortrijk, Belgium weverducre.com


2


VENN 1.0 phase cut

INSTALLATION INSTRUCTIONS | MARCH 2023

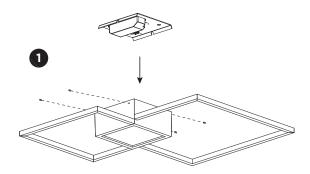

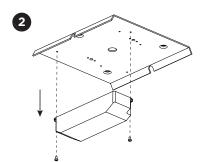

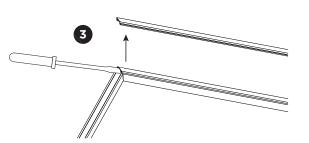

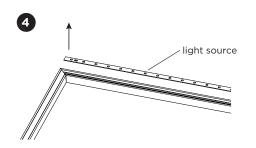

Loosen the four socket screws to remove the fixture from the mounting base. Unscrew the driver and loosen the wires to remove it.

DISMOUNTING AND RECYCLING INSTRUCTIONS

Push a flat screw driver into the gap between two diffusors and pull out the diffusor.

Loosen the wires to remove the light source.

Light source & driver

(2)

3

(4



The light source is replaceable by an authorized professional. For advice contact your Wever & Ducré customer service contact point.



The driver can be replaced by the end user.



A ↑ G

This luminaire contains a light source with the energy class D.

3