



BOX

INSTALLATION INSTRUCTIONS | JULY 2020


installation method of INTERIOR / EXTERIOR

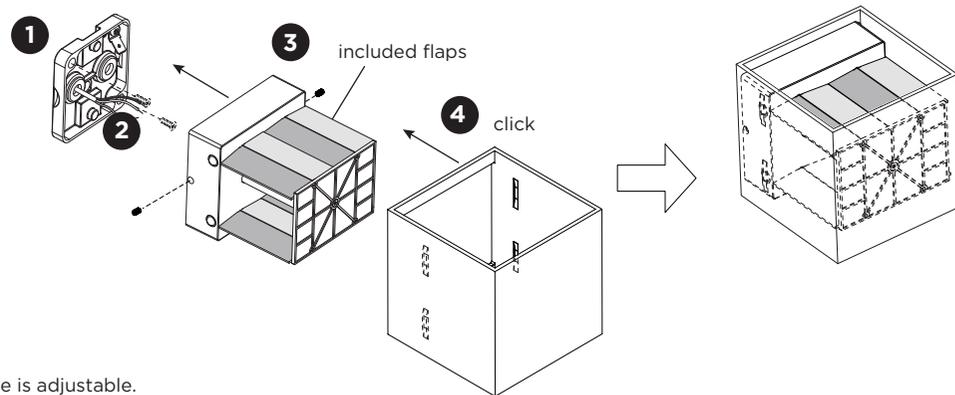

With flaps the beam angle is adjustable.
Before adjusting the flaps, the cover must be mounted.

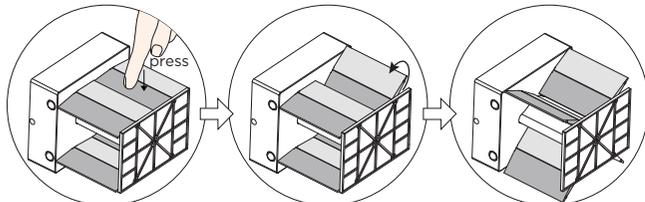


Mounting base:
INTERIOR / EXTERIOR

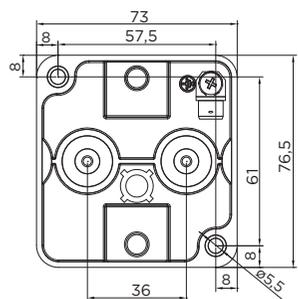


Please use a matching grommet based on the used 220-240V cable and the corresponding type in the overview table.

	A	B	C	D
CABLE				
TYPE	ROUND H05RN-F H07RN8-F H07RN-F	ROUND H05RN-F	ROUND	ROUND
OUTSIDE Ø	min 6.8mm max 8.9mm	min 5mm max 6.8mm	min 1.5mm max 2.6mm	min 1.5mm max 2.6mm
CONDUCTION SECTION	2or3x 0.75mm ² 2or3x 1.0mm ² 2or3x 1.5mm ²	2or3x 0.75mm ² 2x 1.0mm ²	0.75mm ² 1.5mm ²	0.75mm ² 1.5mm ²

 DIMENSIONS



1.0 / 2.0 LED
INTERIOR / EXTERIOR

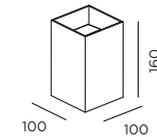


3.0 / 4.0 LED
INTERIOR / EXTERIOR


MOUNTING INSTRUCTION

1 Remove the mounting base from the LED module by loosening the socket screws and mount it on the wall with screws (screws are not included).

2 POWER CONNECTION
Connect to 220-240V.

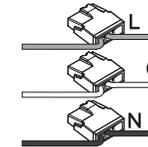

Connect the mounting base earth cable.

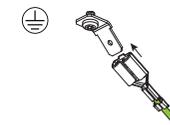

3 Fixate the LED module on the base with the socket screws.

4 Mount the cover by pushing and clicking it over the LED module.