

BOX / RAY WALL

INSTALLATION INSTRUCTIONS | JUNE 2024

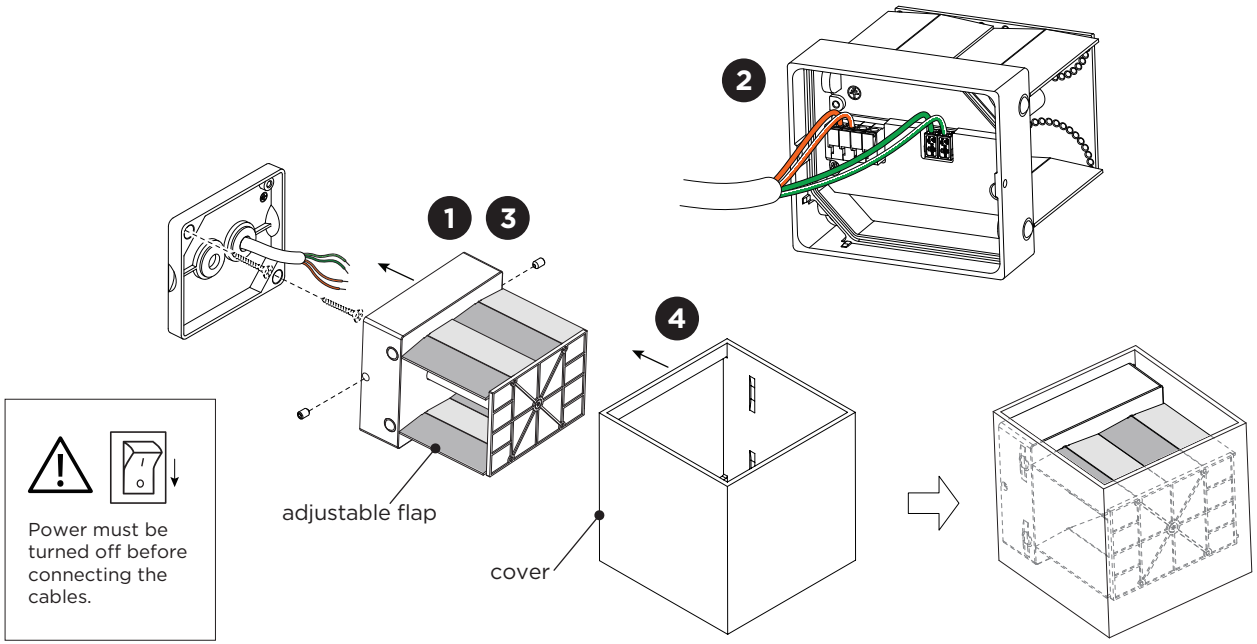


Power must be turned off before connecting the cables.


base dimensions

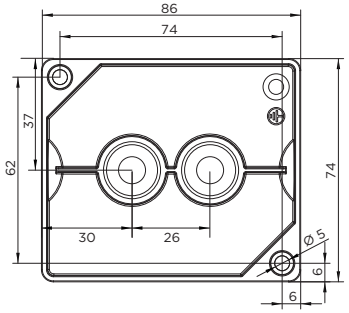

The beam angle is adjustable.
Before adjusting the flaps, the cover must be mounted.

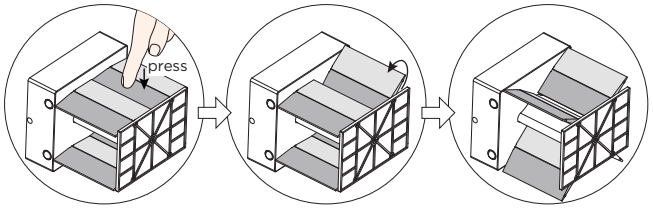

DIMENSIONS

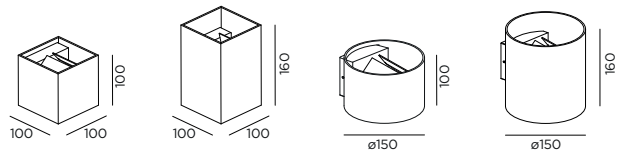


BOX 2.0 Loxone | BOX 4.0 Loxone | RAY 2.0 Loxone | RAY 4.0 Loxone

MOUNTING INSTRUCTION

1. Remove the mounting base from the LED inset by loosening the socket screws and mount it on the wall with screws (screws are not included).

2. **POWER CONNECTION**
Connect the wires to the connectors.
Input Voltage 20-28V.

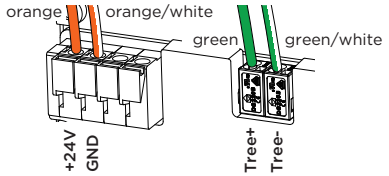

3. Mount the LED inset on the base with the socket screws.

4. Attach the cover to the LED inset by pushing so the ball catch system will fix in the slots.

This fixture only works with Loxone TREE.

works with Loxone


PB19-010-514-0B_v0

WEVER & DUCRÉ
LIGHTING

WEVER & DUCRÉ BV
Spinnerijstraat 99/21, 8500 Kortrijk, Belgium
weverducre.com

BOX / RAY WALL

INSTALLATION INSTRUCTIONS | JUNE 2024

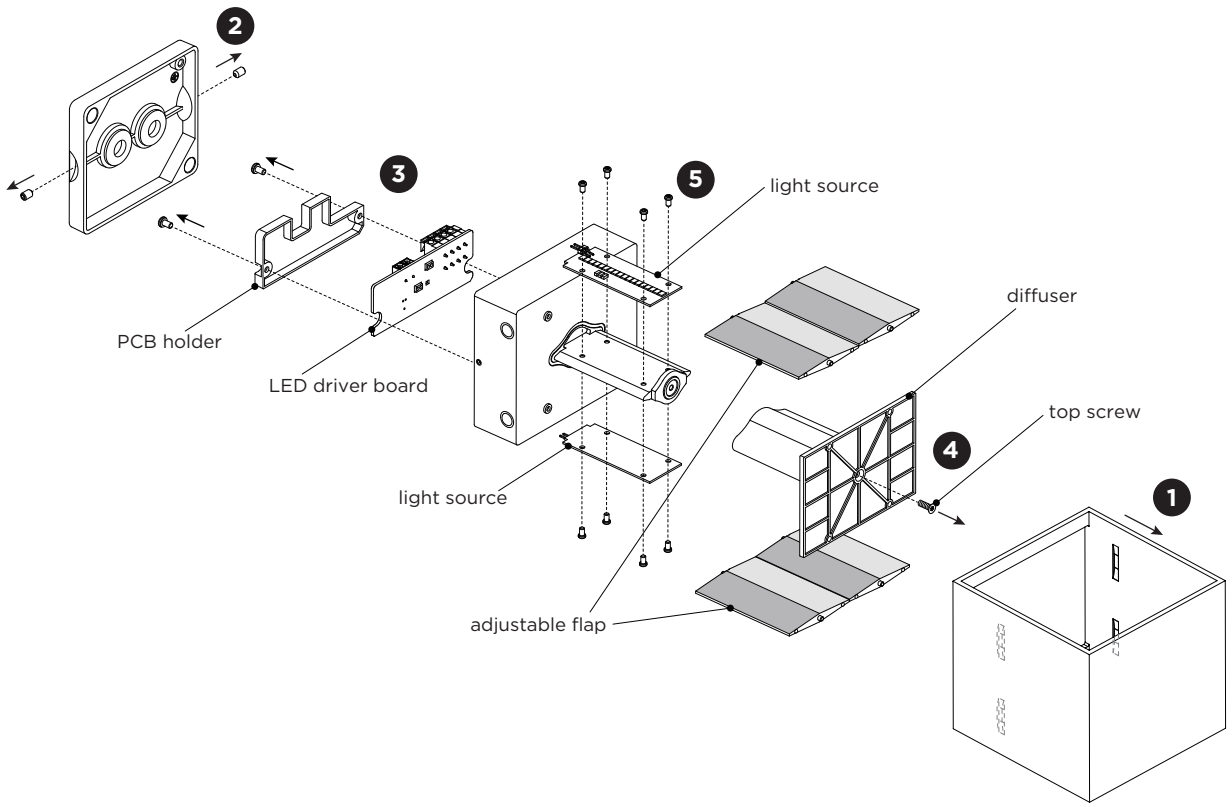

DISMOUNTING AND RECYCLING INSTRUCTIONS
Light source

1. Pull off the cover.
2. Loosen the socket screws and the wiring to take the LED module from the wall.
3. Unscrew the PCB holder and LED driver board to pull out the driver board.
4. Loosen the top screw to remove the adjustable flaps and diffuser.
5. Remove the light sources by unscrewing them.

The light source is replaceable by Wever & Ducré or by a professional with explicit authorisation. For more information please contact your local Wever & Ducré customer service point.

This luminaire contains a light source with the energy class F.

WEVER & DUCRÉ BV
Spinnerijstraat 99/21, 8500 Kortrijk, Belgium
weverducre.com